


BOX / RAY / DOCUS / HEXO MINI ceiling surface

NSTALLATION INSTRUCTIONS | JUNE 2024



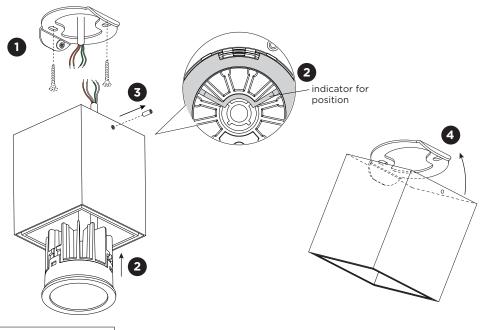

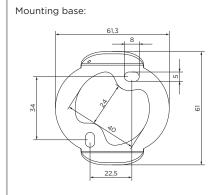

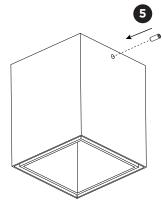

DIMENSIONS



BOX MINI 1.0 Loxone



RAY MINI 1.0 Loxone



DOCUS MINI 1.0 Loxone



HEXO MINI 1.0 Loxone

MOUNTING INSTRUCTION

- Remove the mounting base from the luminaire by loosening the socket screw and mount it on the ceiling with screws (screws are not included).
- 2 Insert the LED engine to the reflector by pushing (get sure to put it in the correct position).
- 3 POWER CONNECTION

Connect the wires to the connectors. Input voltage 20-28V.









- 4 Attach the luminaire to the mounting base with the screw opposite side first and tilt towards the ceiling as shown.
- 5 Fix the luminaire on the base with the socket screw.


This fixture only works with Loxone TREE.







BOX / RAY / DOCUS / HEXO MINI ceiling surface

NSTALLATION INSTRUCTIONS | JUNE 2024

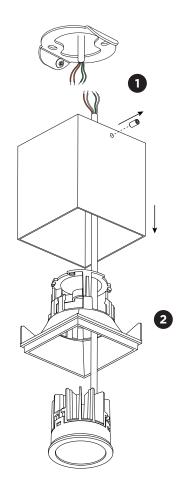

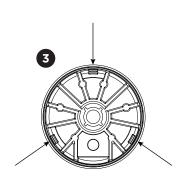

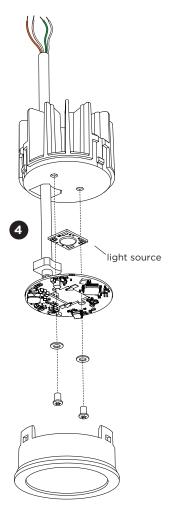



DISMOUNTING AND RECYCLING INSTRUCTIONS

- 1 Unscrew the socket screw from the fixture to remove it from the mounting base and disconnect the wires.
- 2 Pull out the reflector and LED engine.
- 3 Push at the three points to loosen the front ring.
- 4 Unscrew the light source to remove it.



The light source is replaceable by Wever & Ducré or by a professional with explicit authorisation. For more information please contact your local Wever & Ducré customer service point.



This luminaire contains a light source with the energy class F.