

STRANGE 1.0

03-Jun-2019

1.0 LED

LED 7/10W | 350-500mA | 18Vf | COB 3-step | excl. power supply

CE IP20 10.3m 36° 35°/35° 355°

white texture

131161W_

black texture

131161B_

LIGHT COLOUR

2700K | >90CRI | 500/680lm

3

3000K | >90CRI | 520/710lm

5

1800-2850K | >95CRI | 320/430lm | 16Vf

9

ALWAYS USE

plaster kit
for power supplies see our catalogue

90017116-02 or 90017120-01

1.0 PAR16

PAR16 max. 12W | GU10 | 100-240VAC | 50-60Hz

CE IP20 10.3m 35°/35° 355° DO NOT COVER

white texture

131120W0

black texture

131120B0

ALWAYS USE

plaster kit

90017116-02 or 90017120-01


OPTIONAL

for PAR16 lamps see our catalogue

plaster kit (has to be ordered separately)

90017120-01


Aluminium plaster kit



86x86


90017116-02

Plastic plaster kit



86x86



SAFETY DISTANCE FOR HALOGEN LAMPS

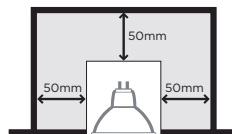



1.0 LED

1.0 PAR16

①





②

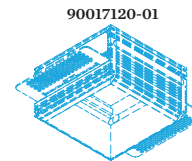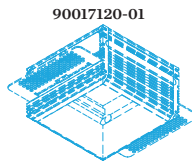

or


or

④



DIMENSIONS

1.0 LED
with plaster kit
90017120-01




86x86

4-25

95

1.0 PAR16
with plaster kit
90017120-01



86x86

4-25

120

1.0 LED
with plaster kit
90017116-02




86x86

10 or 13

95

1.0 PAR16
with plaster kit
90017116-02



86x86

10 or 13


120

MOUNTING INSTRUCTION


- ① Make a hole in the ceiling according to the prescribed dimensions (always use a plaster kit)
- ② Click in the upper part of the fixture into the ceiling and plaster the borders seamlessly

POWER CONNECTION

- ③ SERIAL CONNECTION - for LED
Always use **POWER SUPPLY** according to the specifications of the LED-module



PARALLEL CONNECTION - for PAR16



- ④ Insert the fixture in the upper part. Place the LED-module or PAR16 lamp and fix with spring.



WEVER & DUCRÉ
LIGHTING

www.weverducre.com

Wever & Ducre bvba Spinnerijstraat 99/21 8500 Kortrijk

INSTALLATION
INSTRUCTIONS

PAGE 1/2


STRANGE 1.0 & SNEAK 1.0 PLASTER KIT

03-Jun-2019


plaster kit

90017116-02


plaster kit (has to be ordered separately)



NOTE: There are 4 foldable gaskets on the plaster kit.

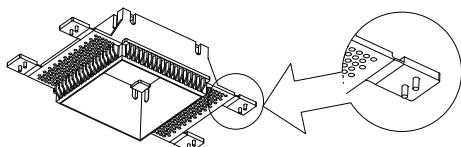

When the thickness of wood board is 13mm, the gasket will be **opened**;


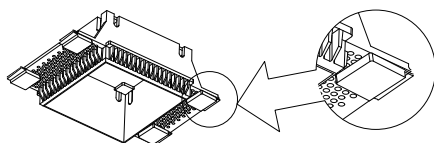


when the thickness of wood board is 10mm, the gasket should be **folded**.



1.0 LED

1.0 PAR16



①



②

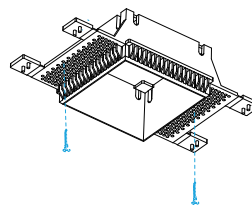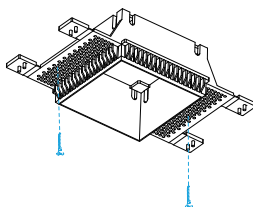


④

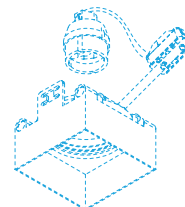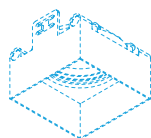


DIMENSIONS

1.0 LED



1.0 PAR16



MOUNTING INSTRUCTION

- ① Make a hole in the ceiling according to the prescribed dimensions (always use a plaster kit)
- ② Click in the plaster kit into the ceiling and screw it tightly on the ceiling, then plaster the borders seamlessly.
- ③ POWER CONNECTION
- ④ Insert the fixture in plaster kit.
for LED: Place the LED-module in the fixture.
for PAR16: Place the PAR16 lamp in the fixture and fix with spring.



WEVER & DUCRÉ
LIGHTING

www.weverducre.com

Wever & Ducre bvba Spinnerijstraat 99/21 8500 Kortrijk

INSTALLATION
INSTRUCTIONS

PAGE 2/2